

First Aid Emergency Eyewash

Eye Protection in Industrial Environment

EYESPRAY®

Article Nr: 850 1003

EyeSpray is an eyewash consisting of a rack with two spray bottles each containing a buffered sodium chloride solution. Once the cover is completely in the downward position, the eyewash will automatically activate.

Flush your face and eyes over the water stream. Both of your hands remain free to hold your eyelids open. The eyewash will remain activated for at least 15 minutes. It is very easy to operate: Grip the handle firmly and pull the cover downward.


EyeSpray is very easy to install, against a wall at 1.10 m height as any other eyewash. It requires no connection to water mains, eliminating all risks of legionella and requiring no warm or tempered water connection. The rinsing water is chlorine free and perfectly sterile.

Suitable applications are: Industries, laboratories, hospitals, and all environments with limited or no access to water mains. After each use, new bottles must be installed. The expiration date of the spray bottles is 3 years

The EyeSpray eyewashes, as well as the bottles, have been engineered and are produced in Sweden.



- Stainless steel 316L
- Safe magnetic closing
- Dimension : 200 mm x 400 mm
- Rinsing time : 15 minutes
- Installation : 1.10 m from ground
- Expiration time bottles : 3 years
- Sterile saline buffer solution (0.9%)
- Quality certified

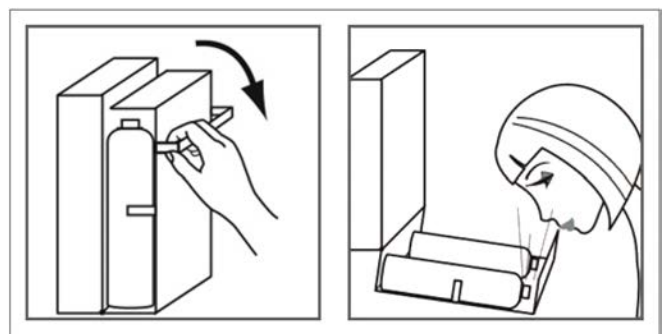

GIA Premix

Distribution in Switzerland: LaboSafe SA, Neuchâtel
www.labosafe.ch | info@labosafe.ch
Tel.: +41 32 756 96 96